

BREAKERS/EXTRACTORS

The breaker breaks the tang of the Wire Thread Insert, thus allowing space to insert the screw.

BREAK PUNCH

Ideal for the occasional Wire Thread Insert installation. It is used in addition to a hammer. To do this, give the breaker a sharp blow with a hammer.

AUTOMATIC BREAKER

Ideal for repeated threading operations, the self-releasing breaker can be used with one hand and does not require any other tools for installation. Pre-setting and striking regularity ensure efficiency and speed.

EXTRACTOR

If necessary, the Wire Thread Insert can be removed manually with an extractor. To do this, insert the blade on the extraction tool into the AMECOIL® inserts until the V-section of the blade is facing the upper end of the insert. Strike the head of the tool with a light blow. Then, while maintaining constant pressure of the blade against the insert, unscrew the extraction tool until the insert is completely removed.



Metric	UNC	UNF	BSW	BSP	BSF	Breaker		Extractor	
						Manuel	Automatic	Extractor	No.
M 2	2 - 56	2 - 64	-	-	-	0520	0500002	0566	1
M 2.5	4 - 40	-	1/8 - 40	-	-	0525	0500025	0566	1
M 3	-	-	-	-	-	0503	0500003	0566	1
M 3.5	6 - 32	6 - 40	-	-	-	0503	0500035	0566	1
M 4	8 - 32	8 - 36	-	-	-	0504	0500004	0566	1
M 5	10/12 - 24	10 - 32	3/16 - 24	-	-	0505	0500005	0566	1
M 6	1/4 - 20	1/4 - 28	1/4 - 20	-	-	0506	0500006	0566	1
M 7	5/16 - 18	-	5/16 - 18	-	9/32 - 26	0507	0500007	0566	1
M 8	-	5/16 - 24	-	-	5/16 - 22	0508	0500008	0566	1
M 9	3/8 - 16	-	3/8 - 16	-	-	0509	-	0567	2
M 10	-	3/8 - 24	-	1/8	3/8 - 20	0510	0500010	0567	2
M 11	7/16 - 14	7/16 - 20	7/16 - 14	-	7/16 - 18	0511	-	0567	2
M 12	1/2 - 13	1/2 - 20	1/2 - 12	-	1/2 - 16	0512	0500012	0567	2
M 14	9/16 - 12	9/16 - 18	9/16 - 12	1/4	9/16 - 16	0514	0500014	0568	3
M 16	5/8 - 11	5/8 - 18	5/8 - 11	-	5/8 - 14	0516	-	0568	3
M 18	3/4 - 10	3/4 - 16	3/4 - 10	3/8	11/16 - 14	0518	-	0568	3
M 20	-	-	-	-	-	0521	-	0568	3
M 22	-	-	-	1/2	-	0522	-	0568	3
M 24	1" - 8	-	-	-	-	0524	-	0569	4
M 26	-	-	-	-	-	0526	-	0569	4
M 27	-	-	-	-	-	0527	-	0569	4
M 28	-	-	-	-	-	0528	-	0569	4
M 30	1" 1/4	-	-	-	-	0530	-	0569	4
M 33	-	-	-	-	-	On request	-	0570	5
M 34	-	-	-	-	-		-	0570	5
M 36	-	-	-	-	-		-	0570	5
M 39	-	-	-	-	-		-	0570	5
M 42	-	-	-	-	-		-	0571	6
M 45	-	-	-	-	-		-	0571	6

Watch the video

